

Clarke®



PORTABLE SANDBLASTER HOPPER KIT MODEL NO: CPSB1

PART NO: 7640125

OPERATION & MAINTENANCE INSTRUCTIONS

LS0309

INTRODUCTION

Thank you for purchasing this Clarke Portable Sandblaster Hopper Kit.

Before you try to use this product, read this manual and follow the instructions carefully. In doing so you will ensure your safety and the safety of others around you. You can also look forward to a purchase that gives you long and satisfactory service.

GUARANTEE

This product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt which will be required as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

PARTS AND SERVICING

For Parts & Servicing, please contact your nearest dealer, or CLARKE International, on one of the following numbers.

PARTS & SERVICE TEL: 020 8988 7400
PARTS & SERVICE FAX: 020 8558 3622
or e-mail as follows:
PARTS: Parts@clarkeinternational.com
SERVICE: Service@clarkeinternational.com

GENERAL SAFETY RULES



Warning: Compressed air can be dangerous. Ensure that you are thoroughly familiar with all precautions relating to the use of compressors and compressed air supplies.

1. Read this instruction manual before connecting the sandblaster to a compressor.
 2. Safety glasses, hood, long-sleeve shirt, gloves and a respirator must be worn during operation and clean up.
 3. During operation, do not expose the hands or skin to the blasted material, keep hands away from the nozzle.
 4. Everyone in the blasting area must also wear personal protective equipment.
-



Warning: Disconnect the sandblaster from the air supply before performing any maintenance.

5. Check the condition of hoses and air lines before each use.
 6. Make sure all connections are secure before use.
-




Warning: Do not point the sandblaster gun at anyone or objects other than the intended work object.

7. Abrasives used in this unit may be covered by COSHH Regulations.
8. ALWAYS make sure there is adequate ventilation. Do not spray in confined areas.
9. ALWAYS disconnect the gun from the air supply when the sandblaster is not in use.
10. ALWAYS clean the gun thoroughly after use. See 'Maintenance'
11. ALWAYS turn off the compressor and expel all air from the air hose and gun before disconnecting the sandblasting gun.
12. ALWAYS use appropriate air hoses and couplings and ensure that they are in good condition. If any parts are worn or damaged, they should be replaced immediately.
13. ALWAYS hold the tool firmly and maintain good balance.
14. NEVER carry the gun by the hose. Keep hoses away from heat, oil and sharp edges.
15. NEVER use wet or even damp grit. Ensure the grit is completely dry.
16. In the case of injury seek expert medical advice immediately.
17. NEVER allow unauthorised persons or children use or play with the sandblaster.
18. Do not use the sandblaster around animals.

PART IDENTIFICATION

Unpack your sandblaster, should there be any damage caused during transit contact your Clarke dealer immediately.

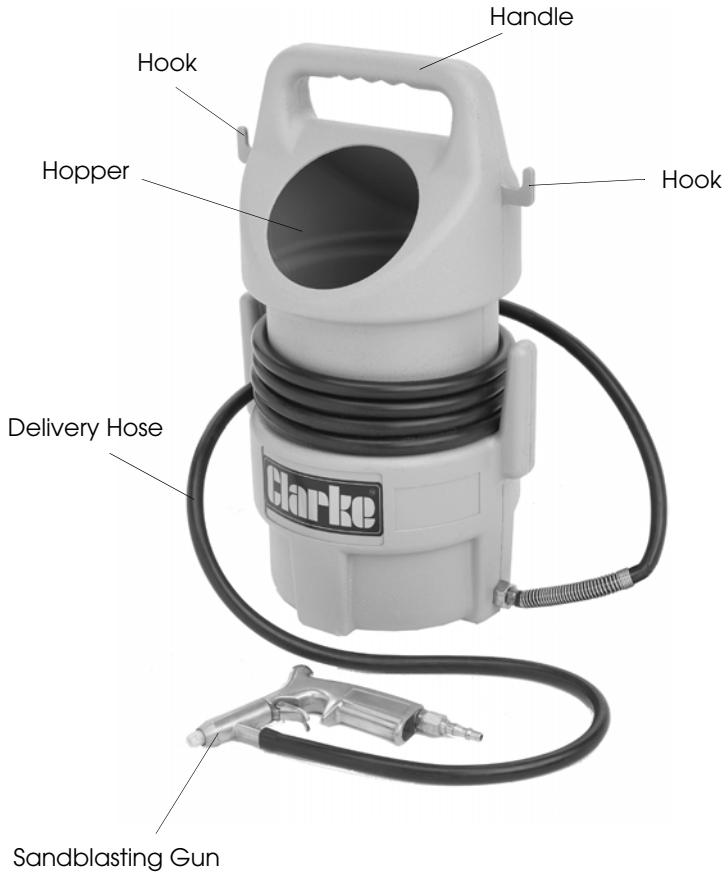


Please dispose of any packaging responsibly. The cardboard packaging can be recycled.

OPERATION


USING YOUR SANDBLASTER

The compressor used must be at least 3hp and capable of supplying a minimum of 10 CFM of air

1. Connect an air hose (sold separately) from your compressor, to the hose fitting on the sandblasting gun. Fig 1.
 - Set the air pressure on your air compressor to 100 -150 psi.

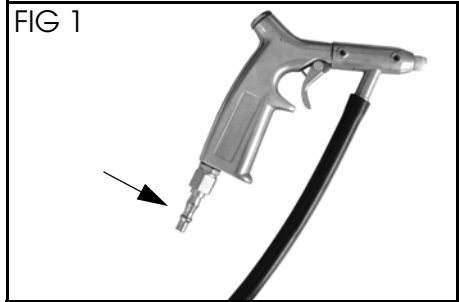

2. Make sure air hole located on the base of the hopper is not covered. Fig 2.
3. Pour the blasting medium into the hopper.
4. Start compressor according to the manufacturers instructions.
5. Check for leaks along all hoses and fittings. if leaks are found, turn off the compressor, disconnect the hose and repair immediately.

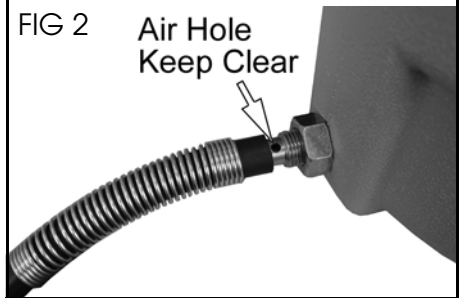

6. Point the sandblasting gun in a safe direction away from people, pets or anything around you that may be damaged by direct or indirect abrasive spray.
7. Press and hold the sandblasting gun trigger until abrasive medium is flowing through the nozzle.

TO STOP BLASTING

1. Release the trigger on the sandblasting gun.

SPECIFICATIONS

Sand Grade Type	Up to 60 Grit (Clarke AOP60)
Abrasive Material	Aluminium Oxide, Garnet Powder, Glass Bead
Sand Capacity: (kg/lbs)	22.7/50
Operating Pressure: (psi)	100-150
Minimum Flow Rate Req: (cfm)	10
Compressor Size Hp: (Minimum)	3
Air Fitting:	1/4" NPT
Dimensions (Length x Width x Height)	490 mm x 430 mm x 895 mm
Weight	2 kg

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com