



Chantre®



ROLLER STAND LINE

MODEL No: CRSL1

Part No: 6500947

ASSEMBLY INSTRUCTIONS



12/08



INTRODUCTION

Thank you for purchasing this Clarke roller stand line.

Before using the roller stand, please read this instruction manual thoroughly and carefully follow all directions given. This is for your own safety and for that of others around you, and will also help you achieve long and trouble free service from your roller stand.

GUARANTEE

- This product is guaranteed against faulty manufacture for a period of 12 months. Please keep your receipt as proof of purchase.
- This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.
- Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.
- This guarantee does not effect your statutory rights.

SPECIFICATIONS

- | | |
|--------------------------|----------------------------------|
| • Maximum weight load | 120 kg |
| • Dimensions (L x W x H) | 1090 mm x 440 mm x (615-1030) mm |
| • Weight | 20 kg |

ASSEMBLY

You should have the follows fixings supplied: 8 bolts, 8 nuts, 8 washers and 4 locking knobs, if any of these are missing contact your local Clarke dealer.



1. Position one set of legs as shown on the right.






ASSEMBLY

- Secure each set of legs into position using the nuts, bolts and washer supplied (4 of each).
- Repeat with the second set of legs at the other end of the roller stand line.
- Turn the roller stand line up the right way.
 - This unit weighs 20 kg, we recommend that two people carry out this step.

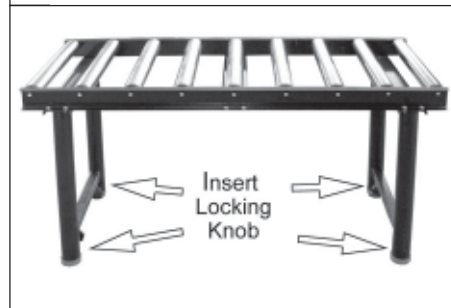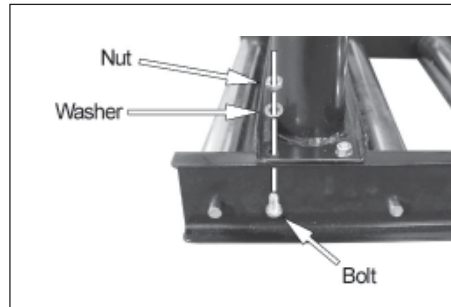

ADJUSTING THE HEIGHT

- Rotate the knobs at the bottom of each leg anticlockwise until they are loose.
- Lift the roller stand line to the desired height.
 - Minimum height is 615 mm
 - Maximum height is 1030 mm
- Rotate the knobs clockwise to lock the legs into position.

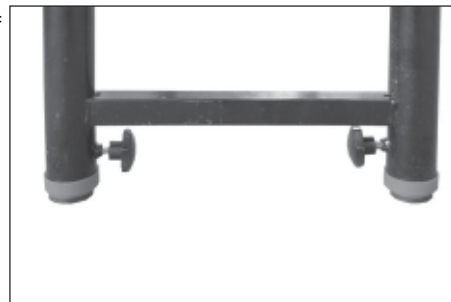



A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS



AIR COMPRESSORS
From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS
Prime duty or emergency standby for business, home and leisure.

POWER WASHERS
Hot and cold, electric and engine driven - we have what you need

WELDERS
Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING
Drills, grinders and saws for DIY and professional use.


WOODWORKING
Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS
Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS
Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS
Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS
All sizes for car and commercial use.

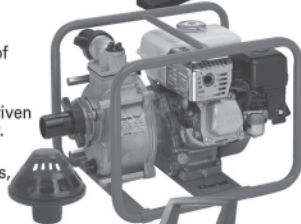

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com

