


# ADDENDUM to OPERATING & MAINTENANCE INSTRUCTIONS

The following are the Parts List & Diagrams for Model XR55

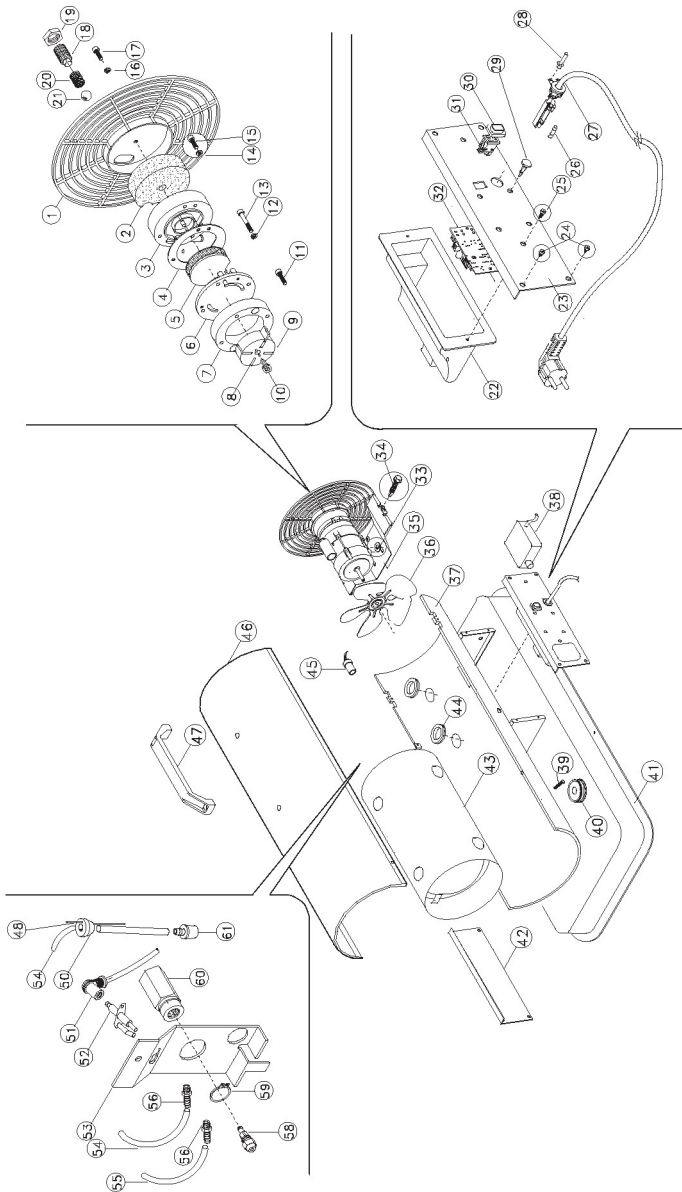

## MODEL XR55 PARTS

No.	Description	Part No.	No.	Description	Part No.
1	Rear Guard	AX1006000111	32	Burner Control Unit	AX1047003611
2	Air Inlet Filter	AX1086001711	33	Washer	AX1018000800
3	Cover	AX1094007211	34	Screw	AX1016010200
4	Gasket	AX1002001311	35	Motor Support	AX1094005911
5	Air Outlet Filter	AX1086000111	36	Fan	AX1087006011
6	Plate	AX1094007311	37	Lower Casing	AX15911
7	Stator Ring	AX1094008111	38	Ignition Transformer	AX1033003711
8	Rotor Th. 17mm	AX1099001611	39	Front Disc	AX1094051411
9	Blade Th. 17 Mm	AX1099001511	40	Filling Cap	AX1094004311
10	Joint	AX1001008211	41	Tank	AX020MN820
11	Screw	AX1016005011	42	Right Side Panel	AX020C20
12	Washer	AX1018001600	43	Comb. Chamber	AXGRY015
13	Screw	AX1016005100	44	Rubber Gasket	AX1002002100
14	Washer	AX1018001600	45	Flame Sensor	AX1050000311
15	Screw	AX1016007700	46	Upper Casing	AX015MNG911
18	Screw	AX1023002511	47	Handle	AX1001002700
19	Nut	AX1017002111	48	Motor 70 W	AX1040011411
20	Spring	AX1023004211	49	Capacitor	AX1049001411
21	Ball	AX1023002411	50	Suction Gasket	AX1002005711
22	Cover	AX1001007736	51	Ht Cable + Conn.	AX1039033311
23	Left Side Panel	AX020N20	52	Ignition Electrode	AX1030002311
24	Screw	AX1016001700	53	Combustion Head	AX1094077211
25	Screw	AX1016008711	54	Rubber Hose	AX1078000111
26	Fuse 3,15 A	AX1035001111	56	Hose Holder	AX1067006011
27	Power Cord	AX1500UKSP2	58	Nozzle	AX1088010111
28	Rivet	AX1019002800	59	Seeger Ring	AX1018004011
29	Spacer	AX1001015680	60	Nozzle Holder	AX1067015911
30	Switch Cover	AX1002002755	61	Oil Suction Filter	AX1086004011
31	Switch	AX1032001900			