

Clarke®

1/4" MINI AIR REGULATOR INSTRUCTIONS FOR USE

Model Number: RC1

Part No: 5100812

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

The regulator should ideally be connected to a fixed airline or mounted to the outlet of the compressor. An arrow, moulded under the body of the unit, indicates the direction in which the air should flow.

The maximum supply pressure the unit can operate is 145psi (10bar).

IMPORTANT! You are reminded that the sequence for airline component assembly is: FILTER/REGULATOR/LUBRICATOR.

To adjust the delivery air pressure, pull the regulator cap upwards and twist clockwise to increase/anti-clockwise to decrease the outlet pressure. The outlet pressure is displayed by the gauge. When the pressure is correct, press the cap back to lock and retain the setting.

This unit has no user serviceable parts.

Clarke®

1/4" MINI AIR REGULATOR INSTRUCTIONS FOR USE

Model Number: RC1

Part No: 5100812

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

The regulator should ideally be connected to a fixed airline or mounted to the outlet of the compressor. An arrow, moulded under the body of the unit, indicates the direction in which the air should flow.

The maximum supply pressure the unit can operate is 145psi (10bar).

IMPORTANT! You are reminded that the sequence for airline component assembly is: FILTER/REGULATOR/LUBRICATOR.

To adjust the delivery air pressure, pull the regulator cap upwards and twist clockwise to increase/anti-clockwise to decrease the outlet pressure. The outlet pressure is displayed by the gauge. When the pressure is correct, press the cap back to lock and retain the setting.

This unit has no user serviceable parts.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com