

Clarke®



TYROLEAN APPLICATOR GUN

Model: CHT691

Part No: 1801691

OPERATING INSTRUCTIONS

CE

GC01/12

INTRODUCTION

Thank you for purchasing this CLARKE applicator gun.

Before using the product, be sure to read these instructions thoroughly. In doing so you will ensure the safety of yourself and of others around you, and you can look forward to the product giving you long and satisfactory service.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase. This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for its intended purpose.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not effect your statutory rights.

CONTENTS

1 x Applicator Gun Assembly c/w comb assembly & spindle


1 x Operating Handle

1 x Reducer Plate

ASSEMBLY

The applicator gun should be delivered with the revolving comb and spindle assembled within the unit, and the handle supplied loose.


1. Screw the handle into the right hand end of the comb assembly through the hole in the casing as shown in Fig 1.

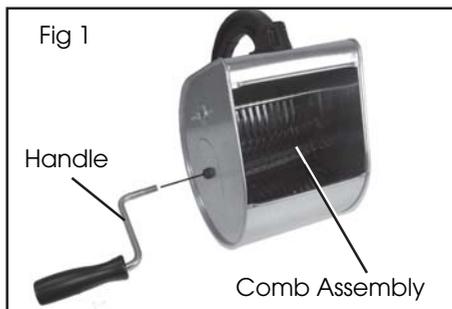

Note: If the handle were assembled at the left side, the handle would unscrew during operation, therefore, the applicator gun is for right-handed operation only.


OPERATION

1. Set the rod as required, by tightening the wing nuts at each side, as shown in Fig 2, taking care the rod is set level.
2. Fill the body of the unit half full of wall coating material. Do not overfill.
 - Wall coating materials are heavy and easier to handle in small quantities.
3. Rotate the handle in a clockwise direction to spray the wall coating material.
4. If required, attach the reducer plate to the front of the unit for coating small areas and re-touching work. Insert the plate, first, into the top of the front opening, before sliding the lower edge down into position as shown in Fig 3.

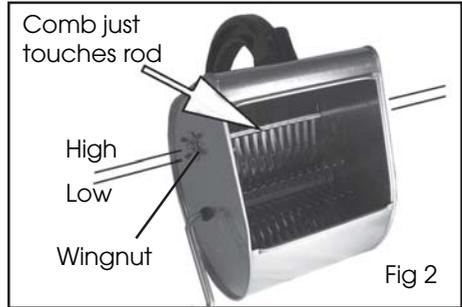

CLEANING

1. To keep your applicator gun clean and ready for use, wash out thoroughly as soon as you stop work.
 - Residual material lodged in the comb will greatly reduce its future performance.
2. Unscrew the handle from one end of the comb and the spindle from the other end, then lift the comb assembly out of the casing as shown in Fig 4, in order to clean it thoroughly with water.

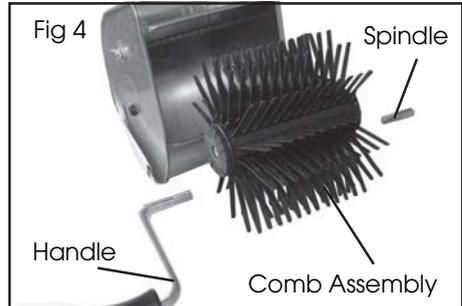

REPLACEMENT PARTS

Replacement comb assemblies are available from your Clarke dealer as part number: HTCHT69101.

ENVIRONMENTAL PROTECTION

Do not dispose of this product or damaged components with general household waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of appropriately.

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS

Submersible, electric and engine driven for DIY, agriculture and industry.

POWER TOOLS

Angle grinders, cordless drill sets, saws and sanders.

STARTERS/CHARGERS

All sizes for car and commercial use.



PARTS & SERVICE: 020 8988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com