

Clarke®



3 - 1 SUPER DETECTOR WITH LCD

MODEL No: CDM70

Part No: 4500140

**OPERATING & MAINTENANCE
INSTRUCTIONS**



1207

INTRODUCTION

Thank you for purchasing your new CLARKE 3 - 1 SUPER DETECTOR WITH LCD. Before use, please read this instruction manual thoroughly and follow all directions carefully.

The CLARKE 3 - 1 SUPER DETECTOR WITH LCD is ideal for DIY and Trade use.


GUARANTEE

- This product is guaranteed against manufacturing faults for a period of 12 months from the date of purchase.
- Keep your receipt as proof of purchase.
- This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it is intended. The reason for return must be clearly stated.
- This guarantee does not affect your statutory rights.

FEATURES

- Detects Metal, Studding and AC Voltages.
- Visual and Audible Warning
- Low Power Consumption
- Easy To Use


PARTS IDENTIFICATION

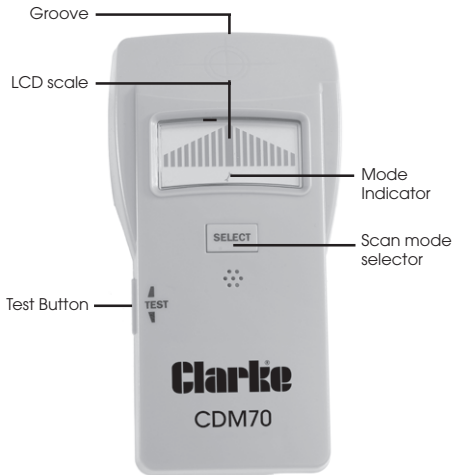

Inserting the battery

1. Remove the battery door on the rear of the unit.
2. Connect a 9V PP3 battery to the battery clip.
3. Place the battery into the compartment.
4. Replace the battery door.

AC VOLTAGE DETECTION

1. Press and hold the TEST button until an icon is shown on the LCD.
2. Repeatedly press the SELECT button until  is displayed.

Calibration

3. Hold the unit in the air away from any metal objects.
4. Press and hold the TEST button.
 - The unit will beep twice when calibration is complete. Do not release the TEST button.

Using


5. Keep holding the TEST button and place the unit on the wall, slowly move the unit sideways across the wall.
 - When the centre bar on the LCD lights up and the buzzer sounds, mark the point by placing a pencil mark in the groove on top of the unit.
6. Carry on moving the unit in the same direction until the centre bar on the LCD goes out and then reverse direction.
 - Once again, mark the point at which the buzzer sounds by placing a pencil mark in the groove on top of the unit.
 - The centre of the live wire is located mid way between the two pencil marks.

AC VOLTAGE DETECTION

Notes:

- Some walls containing metal fibres (used in fireproofing) will cause the detector to register a voltage over a wider area.
- Rubbing or banging the wall may generate static electricity, causing a false positive reading.
- Touching a damp wall being tested may also cause a false reading.
- The unit will not detect wire inside metal shielding or trunking.

METAL DETECTION

1. Press and hold the TEST button until an icon is shown on the LCD.
2. Repeatedly press the SELECT button until  is displayed.

Calibration

3. Hold the unit in the air away from any metal objects,
4. Press and hold the TEST button.
 - The unit will beep twice when calibration is complete. Do not release the TEST button.

Using


5. Keep holding the TEST button and place the unit on the wall, slowly move the unit sideways across the wall.
 - When the centre bar on the LCD lights up and the buzzer sounds, mark the point by placing a pencil mark in the groove on top of the unit.
6. Carry on moving the unit in the same direction until the centre bar on the LCD goes out and then reverse direction.
 - Once again, mark the point at which the buzzer sounds by placing a pencil mark in the groove on top of the unit.
 - The centre of the metal object is located mid way between the two pencil marks.

METAL DETECTION

Notes:

- Wearing rings or other hand jewellery may cause a false reading.

STUD DETECTION

1. Press and hold the TEST button until an icon is shown on the LCD.
2. Repeatedly press the SELECT button until  is displayed.

Calibration

3. Place the unit against the wall, press and hold the TEST button.
 - The unit will beep twice when calibration is complete. Do not release the TEST button.

Using

4. Keep holding the TEST button and slowly move the unit sideways across the wall.
 - When the centre bar on the LCD lights up and the buzzer sounds, mark the point by placing a pencil mark in the groove on top of the unit.
5. Carry on moving the unit in the same direction until the centre bar on the LCD goes out and then reverse direction.
 - Once again, mark the point at which the buzzer sounds by placing a pencil mark in the groove on top of the unit.
 - The middle of the studding is located mid way between the two pencil marks.

Always check that the “STUDDING” that you have detected is not a metal pipe.

STUD DETECTION

Notes:

- You can use the detector on wallpaper, however it may not be effective on some types of foil backed wallpapers.
- If the unit is placed over studding during the calibration, the unit will not work, simply re-calibrate the unit 150 mm away from the last place.
- The surface of the wall should be dry and flat.
- Always keep your free hand away from the wall during detection.
- If you release the test button at any time during detection, you will need to carry out the calibration procedure again.
- Knots in wood can cause false readings to occur.
- Normally, studding is placed at intervals of 40 - 60 cm.

TIPS

- Re-calibrate the unit frequently to avoid inaccurate readings.
- Take several readings vertically above, below, to the left and right to confirm the reading.

Detection Depths

Iron Pipe (25 mm) 30 mm

Studding (30 x 30 mm) 18 mm

AC Voltage (90-250V @50/60 Hz) 50 mm

Detection depth can vary due to moisture content and texture of the wall, paint etc.

SPECIFICATIONS

Model: CDM70

Part No: 4500140

Battery 9V, PP3 or Equivalent

Weight: 200 g

Dimensions: (H x W x D) 158 x 84 x 32 mm



Do not dispose of this product with general household waste. It must be disposed of according to the laws governing Waste Electrical and Electronic equipment, at a recognised disposal facility.

DECLARATION OF CONFORMITY

We declare that this unit conforms to the following standards and directives.

■ 89/336/EEC

Date: 05/12/07

Signed:

A handwritten signature in black ink, appearing to read 'D. Kemp'.

D. Kemp

Title: Engineering manager

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From 100 to 1000 litres, 100 to 1000 PSI, 1000 to 10000 PSI and occasional.

GENERATORS

From 200 to 10000 Watts for home or business, petrol and diesel.

POWER WASHERS

Hot and cold water, 1000 to 10000 PSI and 1000 to 10000 PSI.

WELDERS

Mig, Arc, Tig and Spot from 100 to 10000 PSI.

METALWORKING

From 100 to 10000 PSI and 1000 to 10000 PSI.

WOODWORKING

From 100 to 10000 PSI and 1000 to 10000 PSI.

HYDRAULICS

From 100 to 10000 PSI and 1000 to 10000 PSI.

WATER PUMPS

From 100 to 10000 PSI and 1000 to 10000 PSI.

POWER TOOLS

From 100 to 10000 PSI and 1000 to 10000 PSI.

STARTER/CHARGERS

From 100 to 10000 PSI and 1000 to 10000 PSI.



Clarke INTERNATIONAL

For spare parts and service, please contact your nearest dealer, or Clarke International on

020 - 8988 - 7400

e-mail: Parts@clarkeinternational.com e-mail: Service@clarkeinternational.com

Heenall Street, Epping, Essex CM16 4LD