



JOCKEY WHEEL

FOR TRAILER AND CARAVANS

OPERATING INSTRUCTIONS

WINDING OUT

Undo the lever (1) on the clamp (included in kits CJW34C and CJW48C), lower the jockey wheel as far as possible and then tighten the lever (1). Drive out the jockey wheel by turning the crank handle (2) anti-clockwise.

ATTENTION:

The lever (1) must be greased on the threaded and flange area, other moving parts of the jockey wheel should be periodically greased or oiled lightly.

WINDING IN:

Turn the crank handle (2) clockwise as far as necessary so that the jockey wheel is secured in the fork of the extension outer tube (3). The crank handle must be wound tight to ensure that it remains secured. Undo lever (1) on the clamp and lift the jockey wheel upwards as far as possible and then tighten the lever (1). Ideally the position of a stowed jockey wheel should be parallel to the tow bar.

