

Clarke®

CTJ10GLB ADDENDUM SHEET

FITTING THE VENT PLUG

1. Close the release valve by turning release knob clockwise.
2. Remove the 4 cover screws and lift off the cover.
3. Remove the transport plug.
4. Pump the handle to raise the jack up to full height,
5. Install the air vent plug (supplied).
6. Replace the cover.
7. The jack is now ready to use.

