


Clarke®

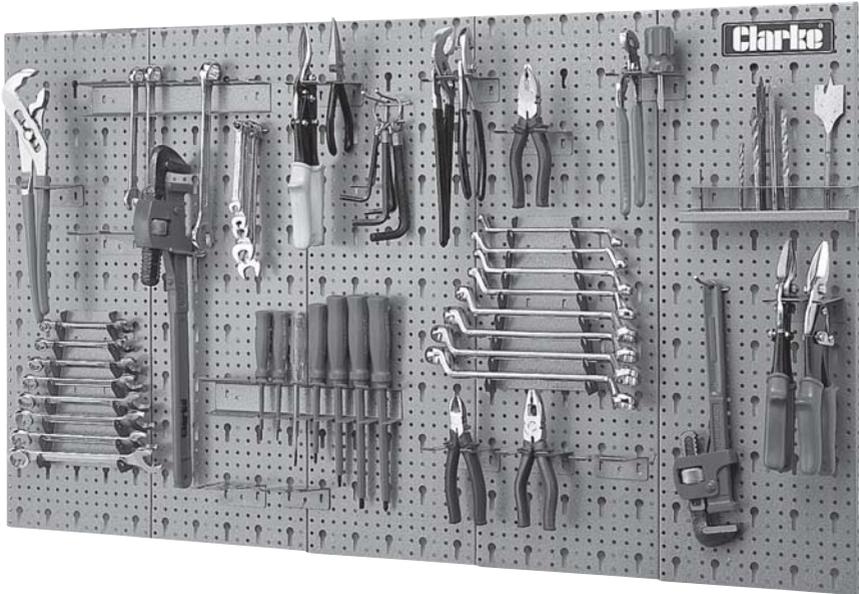

WALL RACK

MODEL: CWR45

Part No: 7640000

ASSEMBLY & INSTALLATION INSTRUCTIONS

CE

GC04/09

INTRODUCTION

Thank you for purchasing this CLARKE wall rack. Please follow these assembly instructions carefully.

GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase. This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended. Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission. This guarantee does not effect your statutory rights.

ENVIRONMENTAL PROTECTION



Do not dispose of this product with general household waste. All tools, accessories and packaging should be sorted, taken to a re-cycling centre and disposed of appropriately.

SPECIFICATION

- Dimensions (mm) 1130 long x 630 high x 14 deep
- Weight 6.5kg

PARTS & SERVICE

For parts & service, please contact your nearest dealer, or CLARKE International, on one of the following numbers.

PARTS & SERVICE TEL: 020 8988 7400 / FAX: 020 8558 3622

or e-mail as follows:

PARTS: Parts@clarkeinternational.com

SERVICE: Service@clarkeinternational.com

PARTS LIST

Unpack your wall rack and check to ensure that no damage was suffered during transit. Should any damage be apparent, you should contact your Clarke dealer immediately.

The kit comprises:


- 5 x panels
- 9 x assorted tool holders
- 12 x peg hooks
- 8 x sets of bolts & nuts
- 6 screws with rawlplugs

Tools required:

- power drill with masonry drill bits
- x-head screwdriver
- 5.5mm spanner/ small screwdriver

ASSEMBLY

1. Fix the five panels together, side by side, using the nuts and bolts supplied. Use two bolts per panel joint. Fully tighten all the nuts.
2. Mark the intended position of the product on the wall. Accurately measure the distance between the centres of the holes of the integral supporting brackets on the back of each panel.
 - End and centre panels only should be used for fixing.
3. Mark these hole centres on the wall and drill holes for the rawlplugs supplied. Secure the screws into each fixing position.
4. The wall rack can now be hung on these screws, ensuring the head of each screw locates into the supporting bracket on the back of each panel.
5. After securing the wall rack to the wall, attach the tool holders and peg hooks into the desired positions to suit your tools.

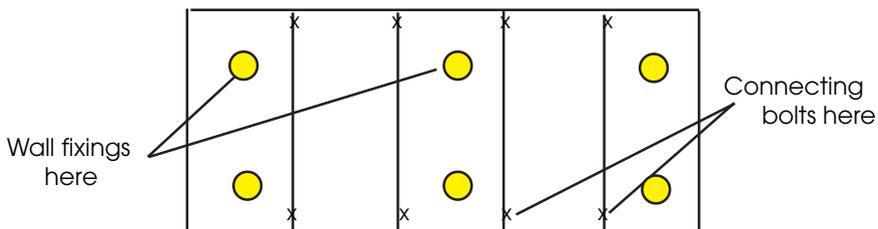

A SELECTION FROM THE VAST RANGE OF

Clarke®

QUALITY PRODUCTS

AIR COMPRESSORS

From DIY to industrial, Plus air tools, spray guns and accessories.

GENERATORS

Prime duty or emergency standby for business, home and leisure.

POWER WASHERS

Hot and cold, electric and engine driven - we have what you need

WELDERS

Mig, Arc, Tig and Spot. From DIY to auto/industrial.

METALWORKING

Drills, grinders and saws for DIY and professional use.

WOODWORKING

Saws, sanders, lathes, mortisers and dust extraction.

HYDRAULICS

Cranes, body repair kits, transmission jacks for all types of workshop use.

WATER PUMPS


Submersible, electric and engine driven for DIY, agriculture and industry.

POWERTOOLS

Angle grinders, cordless drill sets, saws and sanders..

STARTERS/CHARGERS

All sizes for car and commercial use.

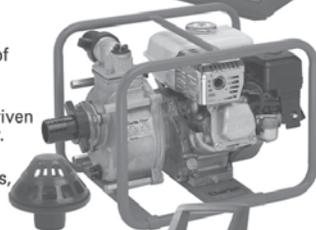

PARTS & SERVICE: 0208 988 7400

E-mail: Parts@clarkeinternational.com or Service@clarkeinternational.com

SALES: UK 01992 565333 or Export 00 44 (0)1992 565335

Clarke INTERNATIONAL Hemnall Street, Epping, Essex CM16 4LG
www.clarkeinternational.com