

PARTS LIST

| | |
|--|-----------------------------|
| Clarke CAT83 Angle Head Die Grinder | Part Number: 3110815 |
|--|-----------------------------|

| <u>Quantity</u> | <u>Description</u> | <u>Part Number</u> |
|-----------------|--------------------|--------------------|
| 1 | Throttle Lever | KL0308AH001 |
| 1 | Spring Pin | KL0308AH002 |
| 1 | Housing | KL0308AH003 |
| 1 | Valve Bushing | KL0308AH004 |
| 1 | O-Ring | KL0308AH005 |
| 1 | Valve Stem | KL0308AH006 |
| 1 | O-Ring | KL0308AH007 |
| 1 | Valve Spring | KL0308AH008 |
| 1 | Air Controller | KL0308AH009 |
| 1 | O-Ring | KL0308AH010 |
| 1 | O-Ring | KL0308AH011 |
| 1 | Valve Screw | KL0308AH012 |
| 1 | Bearing | KL0308AH013 |
| 1 | End Plate | KL0308AH014 |
| 2 | Pin | KL0308AH015 |
| 1 | Cylinder | KL0308AH016 |
| 1 | Rotor | KL0308AH017 |
| 4 | Blade | KL0308AH018 |
| 1 | Collar | KL0308AH019 |

Parts and Servicing

For parts and servicing, please contact your nearest dealer or CLARKE International on the following number; 020 8988 7400 or e-mail as follows; parts@clarkeinternational.com or service@clarkeinternational.com

Parts List for Clarke P/N 3110815 CAT83 Angle Head Grinder.

| | | |
|---|-------------------|-------------|
| 1 | Steel Plate | KL0308AH020 |
| 1 | Front Plate | KL0308AH021 |
| 1 | Bearing | KL0308AH022 |
| 1 | Spindle | KL0308AH023 |
| 1 | Lock Ring | KL0308AH024 |
| 1 | Collet | KL0308AH025 |
| 1 | Collet Nut | KL0308AH026 |
| 1 | Exhaust Sleeve | KL0308AH027 |
| 1 | O-Ring | KL0308AH028 |
| 1 | Air Inlet | KL0308AH029 |
| 1 | Spanner 11mm | KL0308AH030 |
| 1 | Spanner 17mm | KL0308AH031 |
| 1 | O-Ring | KL0308AH032 |
| 1 | Clamp Ring | KL0308AH033 |
| 1 | Air Hose Assembly | KL0308AH034 |

Parts and Servicing

For parts and servicing, please contact your nearest dealer or CLARKE International on the following number; 020 8988 7400 or e-mail as follows; parts@clarkeinternational.com or service@clarkeinternational.com

Parts List for Clarke P/N 3110815 CAT83 Angle Head Grinder.