

CLARKE®



0104

Towable, Drop Sided Garden Trolley

Model : GT - 2

Part No : 3400180

Thank you for purchasing this **CLARKE** Towable/Drop Sided Trolley.

Before using the device, please read this manual thoroughly and carefully follow all instructions given. This is for your own safety and that of others around you, and is also to help you achieve a long and trouble free service from your new truck.

CLARKE GUARANTEE

This CLARKE product is guaranteed against faulty manufacture for a period of 12 months from the date of purchase. Please keep your receipt as proof of purchase.

This guarantee is invalid if the product is found to have been abused or tampered with in any way, or not used for the purpose for which it was intended.

Faulty goods should be returned to their place of purchase, no product can be returned to us without prior permission.

This guarantee does not affect your statutory rights.


SAFETY PRECAUTIONS



WARNING! Read these safety instructions before using the equipment.

- **BEFORE** attempting to transport any load, ensure you are physically able to do so.
- **DO NOT** exceed the maximum working load for the truck - **150kg**
- **DO NOT** leave the truck on a gradient without first securely chocking the wheels.
- **DO NOT** allow children to play with or ride on the truck.
- **DO NOT** leave the truck on any steep inclines.
- **NEVER** use the truck if any of the tyres are deflated....inflate them immediately.
- **NEVER** use the truck to transport Personnel or animals.
- **ALWAYS** inspect the truck for signs of wear or damage before using.
- **ALWAYS** ensure the load is evenly distributed and is perfectly stable.

ASSEMBLY

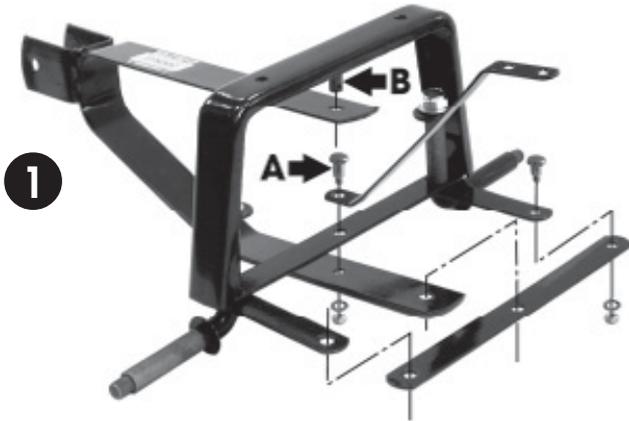


1. Assemble the steering linkage components first in the manner shown in Fig 1.
Shoulder bolts are used at all linkage points, ensuring the bolt with the LONGEST shoulder is used at point A.
Secure the bracket at point 'B' with the flat washer and split pin supplied.



2. Turn the bed on to its back, and attach the steering linkage as shown in Fig.2, using the bolts, flat washers and locknuts supplied. The flat washers should be against the nut.

3

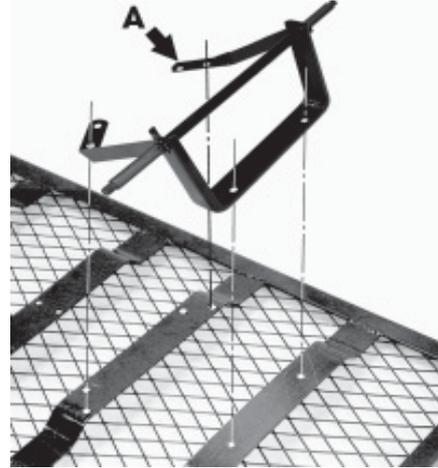

3. Slide the braces 'A', over the ends of the rear axle, and attach the assembly to the bed as shown in Fig. 3

4. Attach the wheels, ensuring the spacer is located on the stub axles FIRST. Secure using the locknut with flat washer supplied.

4



5. Slide the handle into the trunnion, as shown, and attach the assembly to the yolk on the steering mechanism, ensuring the large flat washers are in place at either side of the trunnion.

5



5. Slide the handle into the trunnion, as shown, and attach the assembly to the yolk on the steering mechanism, ensuring the large flat washers are in place at either side of the trunnion.

6. Attach the fences to the bed, using the pins provided

PARTS AND SERVICE.

Replacement Wheel assemblies are available from your Clarke dealer,. Please quote Part number GT201

PARTS & SERVICE TEL: 020 8988 7400

or e-mail as follows:

PARTS: Parts@clarkeinternational.com

SERVICE: Service@clarkeinternational.com