



- A - Right eyepiece with diopter scale (+ ● -).
- B - Focusing wheel.
- C - Roll down eyecups.
- D - Eyecup rolled down.

Thank you for purchasing these CLARKE binoculars.


Please read these instructions carefully before using your binoculars.

Your new binoculars are manufactured to a very high standard, if used as directed will ensure you achieve many years of trouble free use.

### SAFETY PRECAUTIONS

**NEVER** look directly at the sun with binoculars, as by doing so could lead to permanent loss of vision.

**NEVER** place the binoculars in a position where the sun can be directed through the lenses, Fire may result as a consequence.

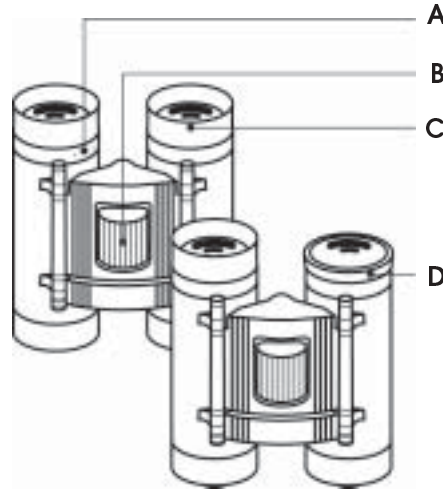

## Specifications

### Model Bin1025 Part No 4499105

Hinged folding design, compact enough to fit almost any pocket. Rubber body with ruby coated lenses and centre wheel for easy focussing.

| Magnification | Objective Lens Dia | Prism Type | Weight | Length | Field Of View (Width) |
|---------------|--------------------|------------|--------|--------|-----------------------|
| 10X           | 25mm               | Roof Prism | 0.2Kg  | 120mm  | 101m@1000m            |

### Model Bin1026-W Part No 4499175

As above, but with nitrogen gas filled optics with green lenses, ensures water and fog proofing, also are waterproof.

| Magnification | Objective Lens Dia | Prism Type | Weight | Length | Field Of View (Width) |
|---------------|--------------------|------------|--------|--------|-----------------------|
| 10X           | 26mm               | Roof Prism | 0.35Kg | 128mm  | 85m@1000m             |

NOTE On both models, the eyecups can be rolled down for users wearing glasses.

### TAKING CARE OF YOUR BINOCULARS

- Remove any dust from the lenses with a blower and/or a soft lens brush which can be purchased from any camera shop. The lenses can be cleaned using approved lens cleaning solution and a soft lens cloth.
- The body can be wiped over with a soft damp cloth, **DO NOT** use any chemicals or abrasive cleaners.
- When the binoculars are not to be used for long periods, store them in a well ventilated location, avoiding high temperatures and humidity.
- Avoid strong impacts caused by bumping or dropping the binoculars.
- **DO NOT** apply excessive force when using the binoculars.

Please note that the details and specifications contained herein are correct at the time of going to print. However CLARKE International reserve the right to change specifications at any time without prior notice.

## Attaching Support Strap


Before using your binoculars for the first time, ensure the neck strap is fitted securely on the Bin1026-W.

The neck strap on the waterproof model also acts as a buoyancy aid if accidentally dropped in water.

### NOTE:

*It is not intended however to submerge the binoculars in water for lengthy periods.*


The neck cord on the Bin1025 comes already fitted.

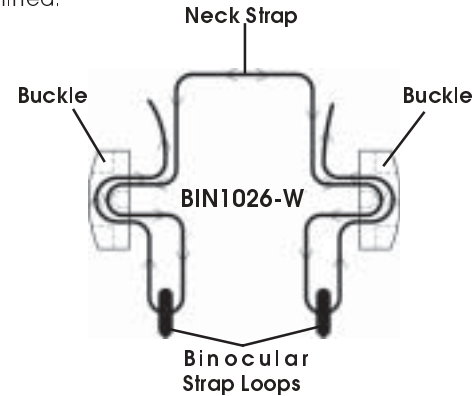

## Instructions For Use

### Adjusting the eye interval

Hold the binoculars in the normal viewing position and move the unit slowly as shown in the figure below until the field of view becomes a single circle.

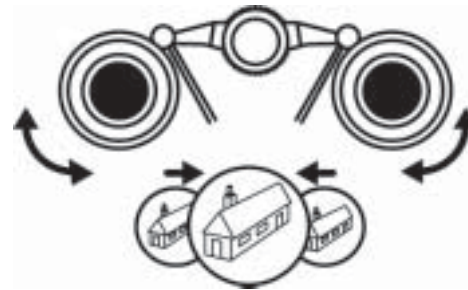

## Adjusting the focus wheel

While looking through the left eyepiece (with your left eye), rotate the focus wheel in both directions, until the subject is in focus



## Adjusting the right eyepiece

While looking through the right eyepiece (with your right eye), rotate the right lens until the same subject is in focus.

Again note the reading on the diopter scale for future use.



Finally, using both eyes, rotate the focus wheel until the subject is in optimum focus.

