



Faulty goods should be returned to their place of purchase, no product can be returned without prior permission. This guarantee does not effect your statutory rights. In the event of stock shortages CLARKE International reserves the right to replace faulty items with a similar item of equivalent value.

Your binoculars are guaranteed by Clarke International for a period of 10 years from the date of purchase. Please keep your receipt as proof of purchase. The guarantee covers the replacement or repair free of charge in the unlikely event of the equipment becoming faulty as a result of faulty manufacturing; no liability can be accepted for faults arising from accident or misuse. This guarantee is invalid if the product is found to have been abused, dropped or tampered with in any way, or not used for the purpose for which it was intended.

Clarke 10 YEAR GUARANTEE

Clarke INTERNATIONAL
 020 - 8988 - 7400
 Email: Sales@clarkeinternational.com or Service@clarkeinternational.com

A SELECTION FROM THE VAST RANGE OF

Clarke
QUALITY PRODUCTS

AIR COMPRESSORS
 From 2000 PSI to 10000 PSI. Clarke Air Compressors are available in a wide range of sizes and capacities.

GENERATORS
 From 1000W to 10000W. Clarke Generators are available in a wide range of sizes and capacities.

POWER WASHERS
 From 1000W to 10000W. Clarke Power Washers are available in a wide range of sizes and capacities.

WELDES
 From 1000W to 10000W. Clarke Welders are available in a wide range of sizes and capacities.

REPAIRING
 Clarke offers a full range of repair services for all Clarke products.

WOODWORKING
 Clarke offers a full range of wood working tools and equipment.

METALS
 Clarke offers a full range of metal working tools and equipment.

WATER PUMPS
 Clarke offers a full range of water pumps and equipment.

POWER TOOLS
 Clarke offers a full range of power tools and equipment.

STARTERS/CHARGERS
 Clarke offers a full range of starters and chargers.

Clarke[®] BINOCULARS



Thank you for purchasing these **CLARKE** binoculars.

Your new binoculars are manufactured to a very high standard, if used as directed will ensure you achieve many years of trouble free use.


Please read these instructions carefully before using your binoculars.

SAFETY PRECAUTIONS

NEVER look directly at the sun with binoculars, as by doing so could lead to permanent loss of vision.

NEVER place the binoculars in a position where the sun can be directed through the lenses, Fire may result as a consequence.

- A - Zoom Lever
- B - Roll down eyecups.
- C - Focusing wheel.
- D - Left eyepiece with diopter scale (+ ● -).
- E - Eyecup rolled down.

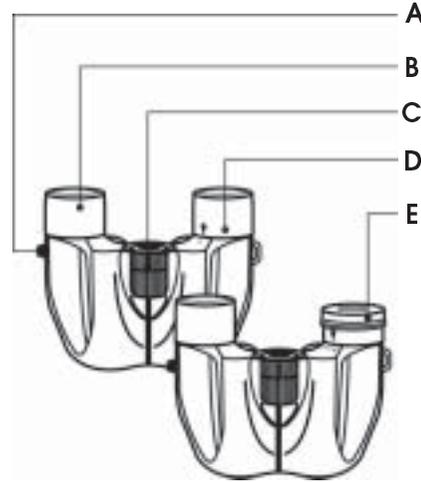

Specifications

Modern compact design with stylish metallic silver finish, centre focusing wheel and ruby coated lenses.

Model Bin61322-Z Part No 4499150

Magnification	Objective Lens Dia	Prism Type	Weight	Length	Field Of View (Width)
6 to 13X Zoom	22mm	Porro Prism	0.25Kg	92mm	87.4m - 52m@1000m

Model Bin103025-Z Part No 4499155

Magnification	Objective Lens Dia	Prism Type	Weight	Length	Field Of View (Width)
10 to 30X Zoom	25mm	Porro Prism	0.35Kg	119mm	61m - 35m@1000m

NOTE On both models, the eyecups can be rolled down for users wearing glasses.

TAKING CARE OF YOUR BINOCULARS


- Remove any dust from the lenses with a blower and/or a soft lens brush which can be purchased from any camera shop. The lenses can be cleaned using approved lens cleaning solution and a soft lens cloth.
- The body can be wiped over with a soft damp cloth, **DO NOT** use any chemicals or abrasive cleaners.
- When the binoculars are not to be used for long periods, store them in a well ventilated location, avoiding high temperatures and humidity.
- Avoid strong impacts caused by bumping or dropping the binoculars.
- **DO NOT** apply excessive force when using the binoculars.

Please note that the details and specifications contained herein are correct at the time of going to print. However CLARKE International reserve the right to change specifications at any time without prior notice.


Attaching Support Strap

Before using your binoculars for the first time, ensure the neck strap/wriststrap is fitted securely.

TYPE 'A' (two loops)

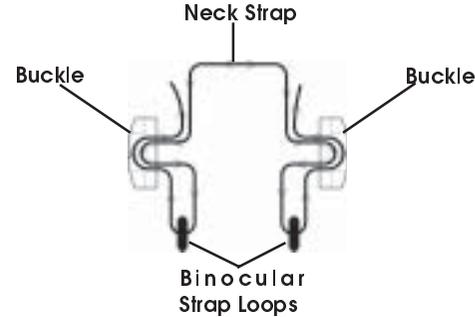


TYPE 'B' (one loop)

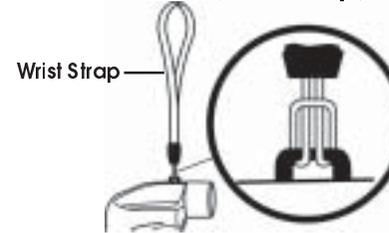

Instructions For Use


Adjusting the eye interval

Hold the binoculars in the normal viewing position and move the unit slowly as shown in the figure below until the field of view becomes a single circle.

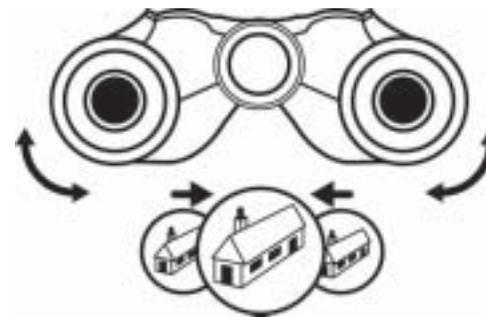

Adjusting the focus wheel

While looking through the right eyepiece (with your right eye), rotate the focus wheel in both directions, until the subject is in focus

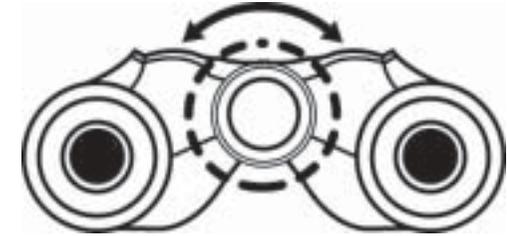


Adjusting the right eyepiece

While looking through the left eyepiece (with your left eye), rotate the left lens until the same subject is in focus.

Again note the reading on the diopter scale for future use.



Using both eyes, rotate the focus wheel until the subject is in optimum focus.

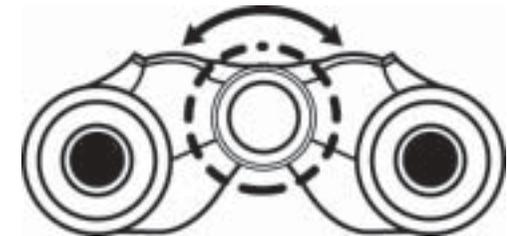

Finally adjust the zoom lever to the desired position.

